


# USER MANUAL

ENGLISH - VERSION 217

huracán<sup>x</sup>

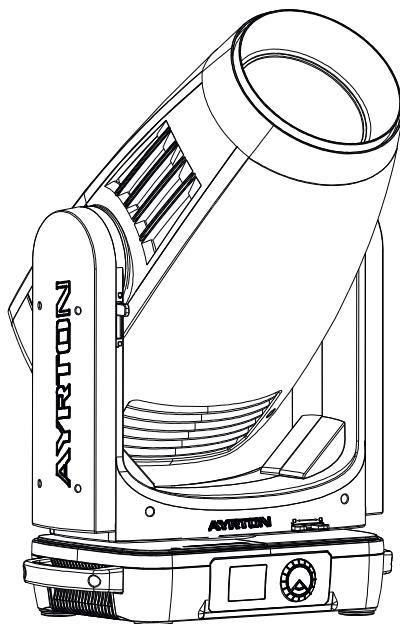

**AYRTON**  
Digital Lighting

SCAN  
FOR  
MORE  
[ayrton.eu](http://ayrton.eu)



2 Rue de Vitruve,  
91140 Villebon-sur-Yvette,  
France

**CONTENTS**

1. SAFETY INSTRUCTIONS .....	3
2. FEATURES .....	4
3. FIXTURE OVERVIEW .....	4
4. DRAWINGS .....	4
5. INSTALLATION INSTRUCTIONS .....	6
6. DMX-512 CONTROL CONNECTION .....	6
7. DMX-512 CONNECTION WITH DMX TERMINATOR .....	7
8. DEVICE DMX START ADDRESS SELECTION .....	7
9. OPERATING INSTRUCTIONS OF THE INTERNAL DMX WIRELESS SYSTEM .....	7
10. DISPLAY .....	7
11. DMX PROTOCOL .....	11
12. ERROR MESSAGES .....	11
13. CLEANING AND MAINTENANCE .....	13

Keep this manual for future needs.

Errors and omissions for all information given in this user manual are possible.  
All information is subject to change without prior notice.



## 1. SAFETY INSTRUCTIONS

### 1.1 > IMPORTANT SAFETY WARNINGS

This device has left the factory in perfect condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

In order to install, operate and maintain the lighting fixture safely and correctly we suggest that the installation and operation be carried out by qualified technicians and these instructions be carefully followed.

#### CAUTION



High voltage. Risk of severe or fatal electric shock.



Always disconnect mains supply before removing any fixture covers.



Never look directly into the light source. Sensitive persons may suffer an epileptic shock.



Never touch the device during operation. covers may be hot.



**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a class a digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Damage caused by the disregard of this user manual is not subject to warranty. The dealer and manufacturer will not accept liability for any resulting defects or problems.

- If the device has been exposed to temperature changes due to environmental conditions, do not power on immediately. The resulting condensation could damage the device. Leave the device powered off until it has reached room temperature.
- Ensure the sealing rubber covers of powerCON TrueOne and XLR connectors are fitted properly when the device is not in use, to avoid water ingress.
- This device falls under protection-class I. Therefore, it is essential that the device be earthed.
- If either lenses or display are damaged (damage may include cracks or gashes in the material) they must be replaced.
- Electrical connections, such as replacing the power plug, must be performed by a qualified person.
- Make sure that the available voltage is not higher than that which is stated in this manual.

- Make sure the power cord is never crushed or damaged by sharp edges. If this should be the case, replacement of the cable must be done by an authorized dealer.
- If the external flexible power cord of this device is damaged, it shall be exclusively replaced by the manufacturer or their service agent or a similar qualified person in order to avoid injury.
- When the device is not in use or before performing maintenance, always disconnect the device from the mains. Only handle the power cord from the plug. Never pull the plug out of a socket by tugging the power cord.
- When powered on for the first time, some smoke or smell may occur. This is caused by coating on metal parts when heated and is normal. If you are concerned, please contact your distributor.
- Do not focus the beam onto flammable surfaces. The minimum distance between the exiting lens of the device and the illuminated surface must be greater than 6 meters.

#### CAUTION

Please be aware that damage caused by any modifications to the device are not subject to warranty. Keep away from children and non-professionals.

### 1.2 > GENERAL GUIDELINES

- This device is a lighting effect for professional use on stages, in discotheques, theatres, etc. The device was designed for indoor and outdoor use.
- This fixture is only allowed to be operated within the maximum alternating current as stated in the technical specifications in section 2 of this manual.
- Handle the device with care avoid shaking or using force when installing or maintaining the device.
- If you use the quick lock cam when rigging the device, make sure the quick lock fasteners are located in the quick lock holes correctly and securely.
- Operate the device only after having familiarized yourself with its functions. Do not permit operation by persons not qualified for operating the device. Most damage is the result of unprofessional operation.
- Please use the original packaging if the device is to be transported.
- The applicable temperature for the device is between -10°C to 45°C. Do not use the device outside of this temperature range.
- The light source contained in this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

#### CAUTION

For safety reasons, please be aware that all modifications to the device are forbidden. If this device is operated in any way different to the ones described in this manual, the product may suffer damage and the warranty becomes void. Furthermore, any other operation may lead to short-circuits, burns, electric shocks, etc...

## 2. FEATURES

### POWER SUPPLY

- AC100-240 V~, 50/60 Hz
- Power Consumption: 1470 W maximum

### OPTICS

- Beam aperture: 6° to 60°
- 178 mm frontal lens

### LIGHT SOURCE

- LED: White LED, 8000±400K Color Temperature
- CRI: 70
- Extreme long life: > 50,000 H

### MOVEMENT

- Pan movement: 540° / 630° Optional (16 bit)
- Tilt movement: 270° (16 bit)
- Advanced moving system: fast, stable and quiet, auto x-y repositioning

### COLOURS

- CMY+CTO color mixing, uniform, linear and speed can be adjustable
- 1 Color wheel: 6 dichroic filters + open, indexable, rainbow effect

### GOBOS

- 2 Rotating gobo wheel: 7 interchangeable, rotating, and indexable, gobo+open
- "Slot in & out" gobo wheel system

### FRAMING SYSTEM

- 4 individually shutter blades
- Rotation of the module: +/- 45° or +/- 60°

### IRIS DIAPHRAGM

- 15-blade iris diaphragm
- Range: 15% to 100% open

### FROST

- 2 frost filters: one light, one heavy

### PRISMS

- 2 rotating and indexable prisms
- One 5-facet circular, one 4-facet linear

### EFFECTS

- Focusable graphic animation effect-wheel
- Continuous rotation in both directions

### DIMMER / STROBE

- Electronic dimmer from 0 to 100%
- Strobe effect: 1 to 25 flashes per second

### HARDWARE FEATURES

- Graphic LCD display with flip function
- Clicking jog wheel to set functions
- Integrated wireless LumenRadio™ receiver
- XLR 5 pin connectors
- RJ45 connectors
- powerCON TRUE1 TOP connectors

### CONTROL

- DMX 512 protocol
- DMX-RDM compatible
- Stand-alone mode, local control panel
- ArtNet™ & sACN protocol
- 3 Control channel modes: 46/44/70 channels

### COOLING SYSTEM

- Advanced liquid cooling system
- Selectable ventilation user modes
- Excess temperature protection

### HOUSING

- Skeleton made of aluminium and steel metal plates
- Base in die-cast aluminium
- Heatsinks in aluminium and copper
- Moulded covers ABS PC (VO class)
- 2-side handles for transportation
- 4 heavy-duty feet
- IP20 protection rating

### INSTALLATION

- 2 Omega 1/4 turn brackets
- 8 1/4 turn mounting points
- Safety cable attachment point

### OPERATING PARAMETERS

- Maximum permitted: 45 °C (113 °F)
- Minimum permitted: -10 °C (14 °F)
- Minimum usage distance: 2 m (6.56 ft)

### COMPLIANCE

- CE, UKCA, ETL


### SIZE

- Product: 486 x 811 x 294 mm (l x h x d)
- Foam: 715 x 555 x 630 mm (l x h x d)

### WEIGHT

- Product: 46 kg






## 3. FIXTURE OVERVIEW

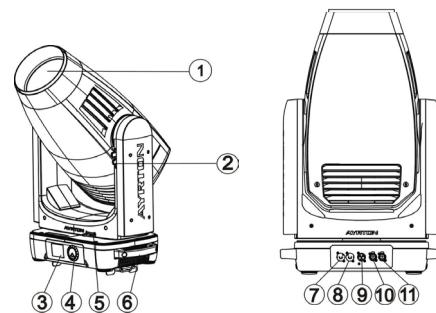



1. LED Assembly	5. Pan Lock	9. Power In
2. Tilt Lock	6. Handle	10. RJ45 In
3. Display	7. DMX Out	11. RJ45 Out
4. Rotary knob	8. DMX In	

## 4. DRAWINGS

### 4.1 FIXTURE DIMENSION

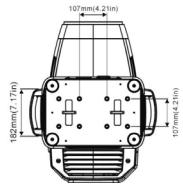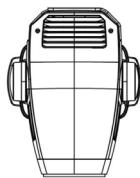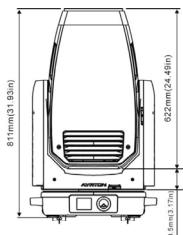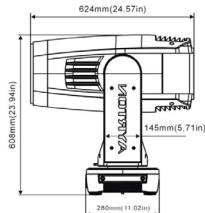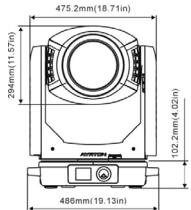



## 4.2 > COLOUR WHEEL

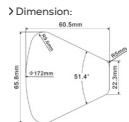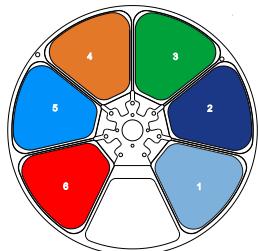

### COLOUR WHEEL 1

1	CTB 1/4	
2	Congo Blue	
3	Green	
4	Orange	
5	Blue	
6	Red	

## 4.3 > ROTATING GOBO WHEEL

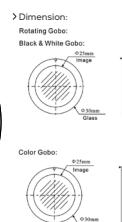
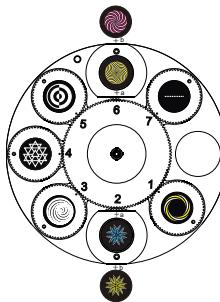


Color Gobo: 62.2mm (2.45in) diameter, 0.3mm thickness, 0.3mm glass.

### GOBO WHEEL 1

#### Rotating Gobo

1	112Y Nested Rings Yellow	GP60303060124
2a	505a Effect Cassette n° 5 Top	GP60303060125
2b	505b Effect Cassette n° 5 Bottom	GP60303060121
3	134 Vortex	GP60303011170A
4	018 Nested Triangle	GP60303011171A
5	067 Black & White Target	GP60303011174A
6a	526a Effect Cassette n° 26 Top	GP60303060122
6b	526b Effect Cassette n° 26 Bottom	GP60303060117
7	130 Dot Line 11	GP60303011169A

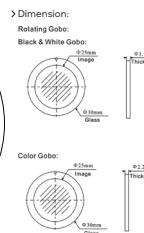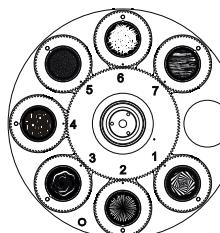


### GOBO WHEEL 2

#### Rotating Gobo


1	039 Infinite Stairs	GP60303011175A
2	047 Fireworks	GP60303011178A
3	049 Smoke Rings	GP60303011177A
4	066 Abstract Square	GP60303011180A
5	074 Star Dust	GP60303011172A
6	081 Iron Filings	GP60303011181A
7	105 Tree Bark	GP60303011183A

## 4.4 > ANIMATION WHEEL

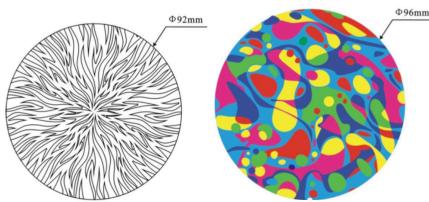

### ANIMATION WHEEL 1 & 2

1	Animation Colour	GP603039901200
2	Animation B&W	GP603039901260

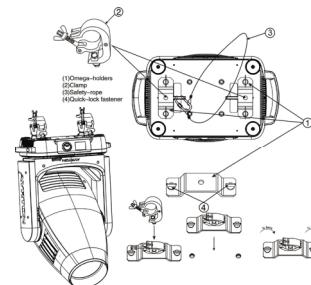

- 1. Omega bracket
- 2. Clamp
- 3. Safety rope
- 4. Quick-lock fastener

## 5. INSTALLATION INSTRUCTIONS

### 5.1 > RIGGING THE DEVICE

#### CAUTION

Please consider the respective national norms during the installation. The installation must only be carried out by a qualified person.

- The applicable temperature for the lighting is between -10°C to 45°C. Do not use the lighting under or above the temperature.
- The installation of the effect has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.
- The installation must always be secured with a secondary safety attachment, e.g. an appropriate safety rope.
- Never stand directly below the device when mounting, removing or servicing the fixture.
- The operator has to make sure the safety relating and machine technical installations are approved by an expert before taking the device into operation for the first time.
- These installations have to be approved by a skilled person once a year.
- Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

### 5.2 > RIGGING USING THE OMEGA BRACKETS

#### CAUTION


This step is very important to ensure safe rigging of the fixture.

- Fix the clamp to the bracket by tightening the M12 nut and bolt to the bracket through the Φ13 hole in the middle of the bracket.
- Insert the quick lock fasteners of the first Omega holder into the respective holes on the bottom of the device. Tighten the quick lock fasteners fully clockwise.
- Install the second Omega holder.
- Pull the safety cable through the handle of the base and over the trussing system or another suitable rigging point. Insert the end into the carabiner and tighten the safety screw.

### 5.3 > RIGGING DRAWINGS

#### CAUTION



Overhead rigging requires extensive experience, including (but not limited to) calculating working load limits, specifying installation/rigging materials, and periodic safety inspection of all installation material as well as the device. If you lack these qualifications, do not attempt the rigging of this device yourself. Improper installation/rigging can result in serious bodily injury.

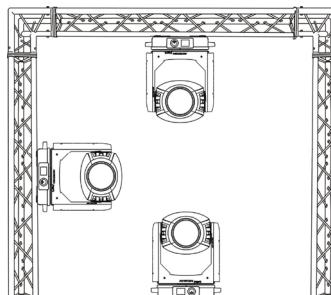

- **ATTENTION!** Please ensure that under no circumstances should the lens be placed face down on any surface, including the ground, as this may cause damage to the lens or impair its optical performance.
- Be sure this fixture is kept at least 0.1 m away from any flammable materials (decoration etc.).
- Always use and install a safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

## 6. DMX-512 CONTROL CONNECTION

Connect the provided male side of the XLR cable to the female XLR output of your controller and the female side of the XLR cable to the male XLR input of the device. You can connect multiple devices together in a serial fashion. The cable needed should be two core screened cable with XLR input and output connectors. Please refer to the diagram below.

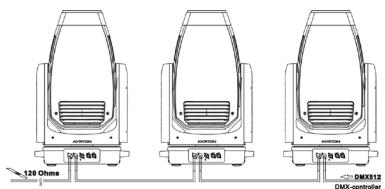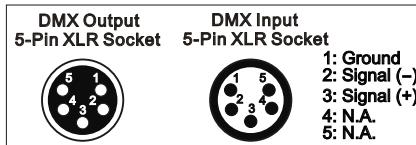

Address 93


Address 47

Address 1

## 7. DMX-512 CONNECTION WITH DMX TERMINATION

For installations where the DMX cable has to run over a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal caused by electrical noise. The DMX terminator is an XLR plug with a 120  $\Omega$  resistor connected between pins 2 and 3, which is then plugged into the output (female) XLR socket of the last fixture in the chain.

Please see illustrations below.

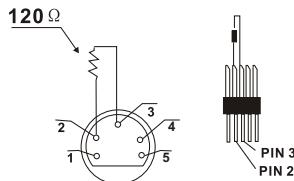

## 8. DEVICE DMX START ADDRESS SELECTION

All fixtures should be given a DMX starting address when using a DMX signal, so that the correct fixture responds to the correct control signals. This digital starting address is the channel number from which the fixture starts to "listen" to the digital control information sent out from the DMX controller. The allocation of this starting address is achieved by setting the correct address number on the display located on the base of the device.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each fixture individually.

If you set the same address on all devices, all the devices will start to "listen" to the same control signal from the same channel number. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set a different address, each unit will start to "listen" to the channel number you have set, based on the quantity of control channels of the unit. That means changing the settings of one channel will affect only the selected device.

In the case of the LED moving head, in 46 channel modes, you should set the starting address of the first unit to 1, the second unit to 47 (46 + 1), the third unit to 93 (46 + 47), and so on.

## 9. OPERATING INSTRUCTIONS OF THE INTERNAL DMX WIRELESS SYSTEM

### 9.1 > EQUIPMENTS

This product is equipped with a Lumen radio Timo DMX receiver

### 9.2 > MESSAGE FROM THE LED INDICATOR

- Solid Green: Logged on to a transmitter and actively receiving DMX data.
- Solid Red: Not logged on to any transmitter (available) or not receiving DMX data.

### 9.3 > WDMX IN THE MENU OF THE FIXTURE

In the sub menu Wireless DMX, you'll find the option "Reset WDMX." Selecting this will disconnect the fixture from its current transmitter.

### 9.4 > SET UP THE WIRELESS SYSTEM

To connect the fixture to a transmitter, the transmitter must be in pairing mode.

You can activate this mode by selecting "Reset WDMX" from the fixture's menu or by performing a factory reset on the fixture.

Once the transmitter is ready, press its pairing button to link the devices.

#### Important Notes:

- After each job, please log out all receivers from the transmitter. This ensures the receivers return to an unassigned state and are ready for future pairings.
- Do not connect a fixture that is wirelessly linked to a transmitter to a DMX controller via cable. Doing so may cause signal interference.


## 10. DISPLAY

- The Display offers several features: you can set the starting address run the pre-programmed program or reset the device.
- The main menu is accessed by double clicking  button until the display starts flashing.
- Browse through the menu by pressing , ,  or  button.
- Press  for 2 seconds in order to exit menu, double click  for confirm. After accessing the edit mode, the unit will automatically exit to the main menu after 15 seconds from the last button press.
- When the unit is powered on if no data signal is connected after 1 minute then the display will switch off automatically.

*PS: No response when quick press the Jog Wheel.*

**CAUTION!**  
THE BATTERY MUST BE A LI-ION RECHARGEABLE BATTERY,  
THE SPECIFICATION IS AS FOLLOWING:

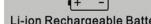

  
Li-ion Rechargeable Battery  
ICR 14500 3.7V

- To install the battery for the first time, please make sure the unit is not connected to AC power.
- Install the battery in the battery holder, then remove the battery and install it back.
- This procedure must be done only for the first battery installation.

## DEFAULT SETTINGS SHADED - V217

Address		
Address	DMX address: 001-XXX Decimal Universe: XXXXX Net: XX Sub-Net: X Universe: X Signal: DMX/WDMX/Art-Net/sACN	DMX Address Decimal Universe Net Sub-Net Universe Signal
Mode		
User Mode	Stand Mode Basic Mode Extend Mode Domino Mode User Mode A User Mode B User Mode C	User's mode to change channel numbers
Edit User Mode	A Max channel PAN :	Edit User Mode
Options		
Status	No DMX Mode Pan Reverse Tilt Reverse Pan Degree Blade Ext Range	Close/Hold/Auto ON/OFF ON/OFF 630/540 ON/OFF
		Auto run if no DMX Pan Reverse movement Tilt Reverse movement Pan Degree Select Blade Ext Range
Options		
Status	Feedback Init PAN Init TILT Reset Mode Pan/Tilt Spd	ON/OFF ON/OFF ON/OFF Fast/All Rot Gobos Fast, Medium, Slow/ FS Mode
		Init PAN Init TILT Reset Mode Pan/Tilt Speed
Service PIN	Service PIN RDM UID Set IP Set Mask IP Reset from Mac DHCP Cross Load SW Clr Error Info	Password = XXX xxxxxx xxx.xxxx.xxxx xxx.xxxx.xxxx ON/OFF ON/OFF ON/OFF ON/OFF
		Service Password =050* RDM UID Set IP Set Mask IP Reset from Mac DHCP Cross Load SW Clr LED Timer
Fans Control	Fans Speed	Auto Stage Silence Super Silence
		Fans Speed select
	Constant Fans	ON/OFF
		Constant Fans
Disp.Setting	Shutoff Time Flip Display Key Lock DispFlash	02-60m 05m ON/OFF ON/OFF ON/OFF
		Display shutoff time Reverse 180 degree Key Lock DispFlash
Temp. C/F	Celsius Fahrenheit	
Initial Pos.	PAN =XXX	Initial effect position
Dim Curve	Square Law Linear Square Law 2	Dim Curve
Refresh Select	12K 2.4K 16K 25K	Refresh Select

Options		
Gobo Correction	ON/OFF	Gobo Correction
Reset P/T Fade	ON/OFF	Reset P/T Fade
Frost (Progressive)	ON/OFF	Frost (Progressive)
Trigger	DMX Value Disp. Set to Follower Auto Program	PAN---- Follower 1, Follower 2, Follower 3 Leader/Alone Auto Program
Reset Default	ON/OFF	Restore factory set.
Reset Options	ON/OFF	Reset Options
Reset User Set	Address	DMX address: 001-XXX Decimal Universe: XXXXX Net: XX Sub-Net: X Universe: X Signal: DMX/WDMX/Art-Net/sACN
	Mode	Extend Mode Stand Mode
	Fans Speed	Auto Stage Silence Super Silence
	Constant Fans	ON/OFF
Info		
Time Info	Current Time Ttl Life Hrs Last Run Hrs LED Hours Current SW Hrs Timer PIN Clr Last Run	XXXX(Hours) XXXX(Hours) XXXX(Hours) XXXX(Hours) XXXX(Hours) Password = XXX ON/OFF
Temp. Info	Temp	L: XXX °C / °F Max: XXX °C / °F Min: XXX °C / °F B: XXX °C / °F Max: XXX °C / °F Min: XXX °C / °F H: XXX °C / °F Max: XXX °C / °F Min: XXX °C / °F
		Reset Temp
Fan Info	xxxx RPM	Fan information
Software Ver	V1.0....	Software version
Network	IP, Mask, Mac	Network
Test		
Home	All Pan&Tilt Colour Gobo Other	All Pan&Tilt Colour Gobo Other
Test Channel	PAN ----	Test function
Manual Ctrl.	PAN =XXX	Fine adjustment of the lamp
Calibration	-Password- PAN ...	Password "050" Calibrate and adjust the effects to standard/right position
GoboFocus Comp	Service PIN RotGobo1Single RotGobo2Single	Password "050"

Test		
Gobo Replace	Gobo Wheel 1 Gobo Wheel 2	Gobo Replace
Preset		
Select Prog.	Prog. Part 1 = Program 1 ~ 10 <b>Program 1</b> Prog. Part 2 = Program 1 ~ 10 <b>Program 2</b> Prog. Part 3 = Program 1 ~ 10 <b>Program 3</b>	Select programs to be run
Edit Prog.	Program 1 : Program 10	Program Test Step 01:SCxxx Step 64:SCxxx Testing program Program in loop Save and exit
Edit Scenes	Edit Scene 001 ~ Edit Scene 250	Pan,Tilt,.... --Fade Time-- --Scene Time-- Input By Outside Save and automatically return manual scenes edit
Scenes Input	XX-XX	Scenes Input

"Medium", "Slow", "FS Mode"

- **FS Mode:** Enhanced Responsiveness – Acceleration and deceleration are highly reactive to improve tracking performance.

#### CMY Spd

With this function, you can select CMY speed from "Fast", "Medium", "Slow".

#### Zoom/Focus Spd

With this function, you can select Zoom/Focus speed from "Fast", "Medium", "Slow".

#### Reset LED Fade

Allows the Light output to fade out and in during the reset process.

#### Hibernation

The device and stepper motors will be powered off if the unit stays without DMX signal for the User defined times (in Minutes). The fixture will perform a reset sequence once DMX is back.

#### DMX Output

With this function, the unit can transmit the signal received via WDMX or ArtNet/sACN through the DMX output.

### 9.2 > MODE

#### 9.2.1. User Mode

With this function, you can adjust the DMX address, the Universe and the selection of the control signal

#### 9.2.2. Edit User Mode

With this function, you can edit user defined channel orders of User Mode A/B/C.

### 9.3 > OPTIONS

#### 9.3.1. Status

##### No DMX Status

With this function, you can choose the unit behavior in case no signal is detected between Close (all dmx value to 0), Hold (keep the last dmx value), and Auto (start auto mode).

##### Pan Reverse

With this function you can reverse the Pan-movement.

##### Tilt Reverse

With this function, you can reverse the Tilt-movement.

##### Pan Degree

With this function, you can select the total Pan degree range between 630 and 540.

##### Blade Ext Range

This function allows you to choose the range of the Blade rotation between Off (+45°) and On (+60°)

##### Feedback

This function allows you to activate or deactivate the automatic repositioning of the Pan & Tilt in case of an accidental/manual move of the yoke.

##### Init PAN

This function allows you to deactivate the Pan movement.

##### Init TILT

This function allows you to deactivate the Tilt movement.

##### Reset Mode

This function allows you to choose the reset process for the gobo.

- **Fast :** The fixture only check the direction of the first gobo
- **All Rot Gobo :** The fixture is checking all the position of each gobo to make sure all the gobo are in the same position (Useful if using a custom Gobo)

##### Pan/Tilt Spd

With this function, you can select Pan & Tilt speed from "Fast",

"Medium", "Slow", "FS Mode"

- **FS Mode:** Enhanced Responsiveness – Acceleration and deceleration are highly reactive to improve tracking performance.

#### CMY Spd

With this function, you can select CMY speed from "Fast", "Medium", "Slow".

#### Zoom/Focus Spd

With this function, you can select Zoom/Focus speed from "Fast", "Medium", "Slow".

#### Reset LED Fade

Allows the Light output to fade out and in during the reset process.

#### Hibernation

The device and stepper motors will be powered off if the unit stays without DMX signal for the User defined times (in Minutes). The fixture will perform a reset sequence once DMX is back.

#### DMX Output

With this function, the unit can transmit the signal received via WDMX or ArtNet/sACN through the DMX output.

#### 9.3.2. Service PIN

##### Password

The Password for this function is "050".

##### RDM UID

With this function, you can display the RDM UID of the Unit (Also QRCode).

##### Set IP

This function allows you to set the IP of the Unit.

##### Set Mask IP

This function allows you to set the IP Mask of the Unit.

##### Reset From Mac

This function allows the Unit to take its IP automatically using its Mac address.

##### DHCP.

This function allows you to enable or disable the DHCP.

##### Cross Load SW

This function allows you to upload the current SW version to other units using a DMX connection. Do not disconnect the units before the process is complete.

##### Clr Error Info

This function allows you to clear the error info list.

#### 9.3.3. Fans Control

##### Fans Speed

With this function, you can set the fans speed. Settings are Auto, Stage, Silence, and Super Silence.

- **Auto:** The LED module delivers **high** output and the fans ramp up and down depending on the ambient temperature and the temperature of the LED module itself.
- **Stage:** The LED module delivers **full** output and the fans remain at full speed regardless of the temperature of the LED module.
- **Silence:** The LED module is limited to **medium** output and the fans rotate at a slower speed.
- **Super Silence:** The LED module is limited to a **lower** output and the fans rotate at the slowest speed.

For specific output details, refer to photometry document.

##### Constant Fans

Enables you to set the fans to run continuously, even when the LED is off.

#### 9.3.4. Disp. Setting

##### Shut off Time

With this function, you can select the delay before the LCD display turns off. Choose between 2 to 60 minutes. The default is 5 minutes.

#### Flip Display

With this function you can rotate the display by 180° (when the unit is rigged).

#### Key Lock

With this function you can activate the automatic key lock function. If this function is activated, the keys will be locked automatically after exiting the edit mode for 15 seconds, keeping press the <MODE/ESC> key for 3 seconds if you do not need this function.

#### DispFlash

With this function activated, display will flash if no signal is detected.

### 9.3.5. Temperature C/F


With this function you can display the temperature in Celsius or Fahrenheit.

### 9.3.6. Initial Pos.

With this function you can display initial effect position.

### 9.3.7. Dim Curve

With this function you can select the Dimmer Curve.

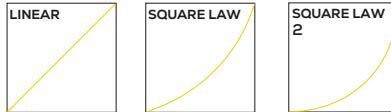

### 9.3.8. Refresh Select

With this function you can select the PWM rate.

- 12K & 2.4K : provides superior dimming quality, especially for smooth fadeouts at lower levels
- 16K & 25K : are ideal for broadcast use

### 9.3.9. Gobo Correction

This function allows you to enable or disable the Gobo Correction. The Unit will automatically insert a correction filter when a glass gobo is inserted.

### 9.3.10. Reset P/T Fade

This function allows you to choose the reset speed of the pan/tilt motors to avoid fast movement.

### 9.3.11. Frost (Progressive)

This function allows you to enable or disable the progressive insertion of the frost.

### 9.3.12. Trigger

#### DMX Value Disp.

With this function you can display the DMX 512 value of each channel. The display automatically shows the channel with a value changing.

#### Set to Follower

With this function, you can define the device as follower.

#### Auto Program

With this function, you can run the internal program. You can select the desired program under "Select program". You can set the number of steps under "Edit program". You can edit the individual scenes under "Edit scenes". With this function, you can run the individual scenes either automatically, i.e. with the adjusted Step-Time.

### 9.3.13. Reset Default

With this function, you can select restore factory set for ON or OFF. The default is OFF.

### 9.3.14. Rst Options

This function restores only the altered options settings (highlighted values in the chart above) to their default state.

### 9.3.15. Reset User Set

With this function, you can define the following "restore user" values:

- Address
- Mode
- Fans Speed
- Constant Fans

## 9.4 > INFO

### 9.4.1. Time Info.

#### Current Time

With this function, you can display the temporary running time of the device from the last power on. The display shows "XXXX". "XXXX" stands for the number of hours. The counter is reset after turning the device off.

#### Ttl Life Hrs

With this function, you can display the running time of the device. The display shows "XXXX". "XXXX" stands for the number of hours.

#### Last Run Hrs

With this function, you can display last the running time of the device. The display shows "XXXX". "XXXX" stands for the number of hours.

#### LED Hours

With this function, you can display the time of LED. The display shows "XXXX". "XXXX" stands for the time of LED.

#### Current SW Hrs

With this function, you can read the software running time of the device. The display shows "XXXX". "XXXX" stands for the number of hours.

#### Timer PIN

With this function, you can display the timer password.

#### Clr Last Run

With this function, you can clear last run time of the fixture. The display shows "ON" or "OFF". Press "Enter" to confirm.

### 9.4.2. Temp.Info

With this function you can display the different temperature of the fixture.

- L: Light engine
- B: Base
- H: Head

### 9.4.3. Fan Info.

With this function, you can display all the fan speed values available in the unit.

### 9.4.6. Software Ver

With this function, you can display the software version of the device.

### 9.4.7. Network

With this function, you can display the Network information.

## 9.5 > TEST

### 9.5.1. Home

With this function you can reset the device. You can select which functions you want to reset by using the submenu.

### 9.5.2. Test Channel

With this function you can test each channel's function to ensure correct operation.

### 9.5.3. Manual Control

Allows you to manually control each feature of the unit

### 9.5.4. Calibration

With this function, you can calibrate and adjust the effect wheels to their correct positions. The password of calibrate values is 050.

### 9.5.5. GoboFocus Comp

This function allows you to calibrate the Gobo compensation for each gobo individually. This is useful to make all the gobo on the same wheel sharp with the same dmx value

### 9.5.6. Gobo Replace

This function allows you to select the gobo you want to replace. The chosen gobo will be rotated into position, making it easy to swap out.

## 9.6 > PRESET

Run the auto program: A leader fixture can output to three different program signals to the follower fixture to operate. It means the host will send cyclically in the following orders (The host will keep operating the program of Part 1). Then the follower fixture will make the selectively receiving according to its own set.



- If the follower fixture chooses Run For Follower 1 from the menu of 1-3, then it will receive the part 1's automatic program from link, in the same way, when the follower fixture chooses Run For Follower 2, then it will receive the part 2's automatic program from link.
- Enter the menu of 1-3 Function Mode---Set To Follower. Here to set machine operate which part of the program during the host-follower connection
- Enter the menu of 1-4, 1-5 Function Mode---Set To Leader
- Enter the menu of 8-1 Edit Program---Auto Program Part1. The host outputs three groups driven program---Part1, Part2, Part3 (Part1 program runs the same effect as the host)
- Enter the menu of 8-2 Edit Program---Edit Program. Edit the program's connection, connect the scene in order
- The editor of the scene, there are as many as 250 scenario editors, and every scene can have a program connection of 10.

#### Note:

Part 2, Part 3 repeat in accordance with the Part1's repeat. For example: When Part 1 uses Program 2, Part 2 uses Program 4, Part 3 uses Program 6. Assume:Program 2 includes scene of 10, 11, 12, 13. Program 4 includes scene of 8, 9, 10; Program 6 includes scene of 12, 13, 14, 15. Then it will run as below.

#### Example:

##### Part 1:



##### Part 2:



##### Part 3:



## 9.7 > SHORTCUT MENU

### 9.7.1. Flip display

With this function you can rotate the display by 180° (when the unit is rigged)

### 9.7.2. Restore Factory

With this function, you can restore default setting (highlighted value in the above chart).

### 9.7.3. Rst Options

This function restores only the altered options settings (highlighted values in the chart above) to their default state.

### 9.7.4. Rst User

With this function, you can restore User settings (Setting can be edit under Options/Reset User Set).

### 9.7.5. Rst DMX Addr 1

With this function you can only set the address to 1.

### 9.7.6. Unlink WDMX

This function allows you to disconnect the fixture from its current WDMX transmitter.

## 11. DMX PROTOCOL

Scan the QR code on the cover page to download the DMX CHART.

## 12. ERROR MESSAGES

When you turn on the device, it will first perform a reset. The display may show "Err channel is XX" should there be problems with one or more functions. "XX" stands for channel 1, 2, 3, 4, 5, 6 etc whose sensor has encountered a problem. For example, when the display shows "Err channel is Pan movement", it means there is an error on channel 1. If there are errors on channel 1, channel 3, channel 6 at the same time, you may see the error message, "Err channel is Pan movement", "Err channel is Tilt movement", "Err channel is Shutter", flash twice, and then the device will generate a second reset. If the error messages persist after performing a reset more than twice, the channels which have errors may not work properly however, all other functions can work as usual. Please contact your dealer or manufacturer for service. Self repair is not allowed.

### PAN- movement Er

(PAN- yoke movement error) This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunction (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The PAN-movement is not located in the default position after the reset.

### TILT- movement Er

(TILT- head movement error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions ((Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The TILT-movement is not located in the default position after the reset.

### Zoom wheel Er

(Zoom wheel error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The Zoom -movement is not located in the default position after the reset.

### Focus 1 wheel Er

(Focus 1 wheel error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The Focus 1 -movement is not located in the default position after the reset.

### Focus 2 wheel Er

(Focus 2 wheel error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective



(or its driving IC on the main PCB). The Blade 4 - movement is not located in the default position after the reset.

#### **Blade 4\_Rot wheel Er**

(Blade 4\_Rot wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Blade 4\_Rot - movement is not located in the default position after the reset.

#### **All\_Blade\_Rot wheel Er**

(All\_Blade\_Rot wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The All\_Blade\_Rot - movement is not located in the default position after the reset.

#### **Frost 2 wheel Er**

(Frost 2 wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Frost 2 - movement is not located in the default position after the reset.

#### **Animation\_Rot 1 wheel Er**

(Animation\_Rot 1 wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Animation\_Rot 1 - movement is not located in the default position after the reset.

#### **Animation\_Rot 2 wheel Er**

(Animation\_Rot 2 wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Animation\_Rot 2 - movement is not located in the default position after the reset.

## **13. CLEANING AND MAINTENANCE**

*The following points have to be considered during inspection:*

- All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- There must not be any deformations to the housing, lenses, rigging and installation points (ceiling, suspension, trussing).
- Motorized parts must not show any signs of wear and must move smoothly without issue.
- The power supply cables must not show any damage, material fatigue or sediment.

Further instructions depending on the installation location and usage have to be adhered to by a qualified installer and any safety concerns have to be removed.

#### **CAUTION**



Disconnect from mains before starting maintenance operation

In order to ensure the device remains in good condition and does not fail prematurely, we suggest regular maintenance.

- Clean the inside and outside lens each week to avoid loss of output due to accumulation of dust/ dirt on the lens.
- Clean the fans each week to ensure maximum airflow and efficient thermal cooling. This will ensure the light source is operated in the best possible condition.
- A detailed electrical check by an approved electrician every quarter to make sure that the circuit contacts are in good condition. This will prevent poor circuit contacts and the resultant overheating.

We recommend frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine parts from your local dealer.

